

LUCAS

Quality

EQUIPMENT

&

SPARE PARTS



1960

TRIUMPH

SCOOTERS & MOTOR CYCLES

173 c.c. Tigress TS1; 250 c.c. Tigress TW2 & TW2S; 200 c.c. Tiger Cub T20 & T20S;
350 c.c. Twenty-One 3TA; 500 c.c. Speed Twin 5TA; 500 c.c. Tiger 100A; 650 c.c. Tiger 110; 650 c.c. Bonneville T120;
650 c.c. Thunderbird 6T; 650 c.c. Trophy TR6.

JOSEPH LUCAS (SALES & SERVICE) LTD • BIRMINGHAM 18 • ENGLAND



EQUIPMENT SPECIFICATIONS AND PAGE INDEX

UNIT	See page	173 c.c. TS1 Tigress 6v. 250 c.c. TW2 Tigress 6v. 250 c.c. TW2S Tigress 12v.		200 c.c. T20 Tiger Cub 200 c.c. T20S Sports		350 c.c. 3TA Twenty-One 500 c.c. 5TA Speed Twin		500 c.c. T100A Tiger		650 c.c. 6T Thunderbird		650 c.c. TR6 Trophy 650 c.c. T110 Tiger 650 c.c. T120 Bonneville	
		Model	Part No.	Model	Part No.	Model	Part No.	Model	Part No.	Model	Part No.	Model	Part No.
ALTERNATOR	3	5AF 5AF	047540A +54021000	RM13 RM13	047518D +54021002	RM13/15 BM4 PUZ7E-11	047526H *36189A (36129)	RM15 BM4 PUZ7E-11	047531A *36189A (36129)	RM15 BM4 MLZ9E	047531A *36189A (36129)	RM13/15 BM4 +MLZ9E PUZ7E-10	54021010 *36189A (36129) 54944995 +54094163
BATTERY	5	MLZ9E	54941657	MA6 MA12 4CA	839101 +54094110 +54094090 45077E +45101A 47583B	MA6 2ET	794981	MA6 2ET	54094161	MA6 2ET	54094161	MA6 2ET	54094161
CABLE HARNESS Less lights With lights	3	MA6 MA12 4CA	45077E +45101A 47583B	MA6 MA12 4CA	45077E +45101A 47583B	MA6 2ET	794981	MA6 2ET	54094161	MA6 2ET	54094161	MA6 2ET	54094161
COIL, IGNITION	3	MA6 MA12 4CA	45077E +45101A 47583B	MA6 MA12 4CA	45077E +45101A 47583B	MA6 2ET	794981	MA6 2ET	54094161	MA6 2ET	54094161	MA6 2ET	54094161
CONTACT BREAKER	8	MA6 MA12 4CA	45077E +45101A 47583B	MA6 MA12 4CA	45077E +45101A 47583B	MA6 2ET	794981	MA6 2ET	54094161	MA6 2ET	54094161	MA6 2ET	54094161
DISTRIBUTOR	3	MA6 MA12 4CA	45077E +45101A 47583B	MA6 MA12 4CA	45077E +45101A 47583B	MA6 2ET	794981	MA6 2ET	54094161	MA6 2ET	54094161	MA6 2ET	54094161
HORN	5	5H 5H	70155A +70156A	HF1950	70145D	HF1441	70048J	HF1441	70048J	HF1441	70048J	HF1441	70048J
HORN PUSH	5	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
HORN PUSH AND DIPPER	5	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
SWITCH	5	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
LAMPS	5	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Home	5	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Home and export	5	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Export, Europe not France	5	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Export, France	5	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Export, U.S.A.	5	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Export, except destinations listed	5	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Stop tail and number plate illumination	5	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Stop tail and number plate illumination, export	5	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Tail and number plate	5	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
MAGNETO	5	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
TR6 Models	5	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
T110, T120 Models	5	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Export, U.S.A., alternative (Comp.)	5	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Export, U.S.A., alternative (Comp.)	5	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Auto advance unit	5	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
RECTIFIER	3	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
REFLEX REFLECTOR	8	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
STARTING MOTOR	8	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
SWITCHES	7	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Dipper	7	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Lighting	7	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Knob	7	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Escutcheon plate	7	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Lighting and ignition	7	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Knob	7	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Engine cut-out	7	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Starting motor	8	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Stop lamp	7	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Spring	7	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
Warning light	8	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A
SUPPRESSOR	—	5H 5H	70155A +70156A	4A	76204A	4A	76204A	4A	76204A	4A	76204A	4A	76204A

*When ordering quote number shown in brackets
 †T110 †T20S †T20 †T20S †T20S †T20S
 †T110 †T20S †T20 †T20S †T20S †T20S

ALTERNATORS & RECTIFIER

Part No. ... Model ...	†047518D RM13	†047526H RM13/15	†047531A RM15
Detailed Parts			
Rotor ...	466124	423506	423506
§Stator ...	468678	468973	469427
Clip, cable ...	54210167	—	54211509
Washer, clip, cable ...	161673	—	161673
‡Rectifier ...	47132B	47132B	47132B

Part No. ... Model ...	†047540A SAF	†54021000 SAF	†54021002 RM13
Detailed Parts			
Rotor ...	54210940	54210946	466124
§Stator ...	47136A	47135A	47175A
Clip, cable ...	54210167	54210167	54210167
Washer, clip, cable ...	161673	161673	161673
‡Rectifier ...	47132B	47128A	47132B

DISTRIBUTORS

Part No. ... Model ...	40664A/B 15D1	40699A/B 15D1	40700A 15D1
Detailed Parts			
§Cover ...	421112	54411737	54411737
Screw, fixing cover to bracket ...	—	54120019	54120019
§Clip, securing cover ...	421561	—	—
Bracket, cover ...	—	54411736	54411736
§Contact set ...	421106	421106	421106
§Condenser ...	421327	421327	421327
Terminal, contact breaker ...	405314	405314	405314
Bush, insulating contact breaker terminal ...	421109	421109	421109
Pad, insulating contact spring ...	421102	421102	421102
§Cam ...	54411249	423759	54411249
Spring set, auto advance (2) ...	54410895	54411287	54410895
Weight (set of 2) ...	421056/S	421056/S	421056/S
§Shaft and action plate ...	421054	421054	421054
Collar, shaft ...	421103	421103	421103
§Oil seal, body ...	54160003	54160003	54160003
§Sundry parts, set ...	419645	54412407	54412407


DISTRIBUTORS

Part No. ... Model ...	40573H 18D2	40646B 18D2	40690B 18D2	40710A 18D2
Detailed Parts				
§Cover, moulded ...	425049	425049	425049	425049
Brush and spring ...	404435	404435	404435	404435
Grommet, rubber ...	421554	421554	421554	421554
Clip, cable contact ...	421863	421863	421863	421863
§Rotor arm ...	423486	423486	423486	423486
Terminal, contact breaker ...	123154	123154	123154	123154
§Bush, insulating, contact breaker terminal ...	423110	423110	423110	423110
Connector, terminal to condenser Bush, insulating condenser connector ...	423108	423108	423108	423108
§Condenser ...	423109	423109	423109	423109
§Cover, rubber, condenser ...	54410823	54410823	54410823	54410823
§Contact set ...	421569	421569	421569	421569
§Plate, contact breaker base ...	425219	425219	425219	425219
§Cam ...	423113	423113	423113	423113
§Spring set, auto advance ...	424972	424972	425284	54412359
Weight, auto advance ...	425398/S	54410895	425398/S	422655/S
Cup, thrust sealing ...	421056/S	421056/S	421056/S	421056/S
§Shaft and action plate ...	424974	424974	—	424974
Ring, rubber, sealing ...	424967	424967	425444	424967
§Clip, retaining cover ...	188639	188639	188639	188639
§Bushing, bearing ...	424158	424158	424158	424158
§Sundry parts, set ...	423571	423571	425498	423571
	425243	425243	425243	425243


COILS, IGNITION

Part No. ... Model ...	45077E MA6	45112B 2ET
Detailed Parts		
§Grommet, rubber ...	421554	—
§Cable clip contact ...	421863	—
Nut, switch and contact breaker terminal ...	166043	—
Washer, switch and contact breaker terminal ...	188330	—
Washer, plain, switch and contact breaker terminals ...	131023	—

§Recommended spares for stock ‡Order separately
†For reference purposes only, normally serviced by stator and rotor

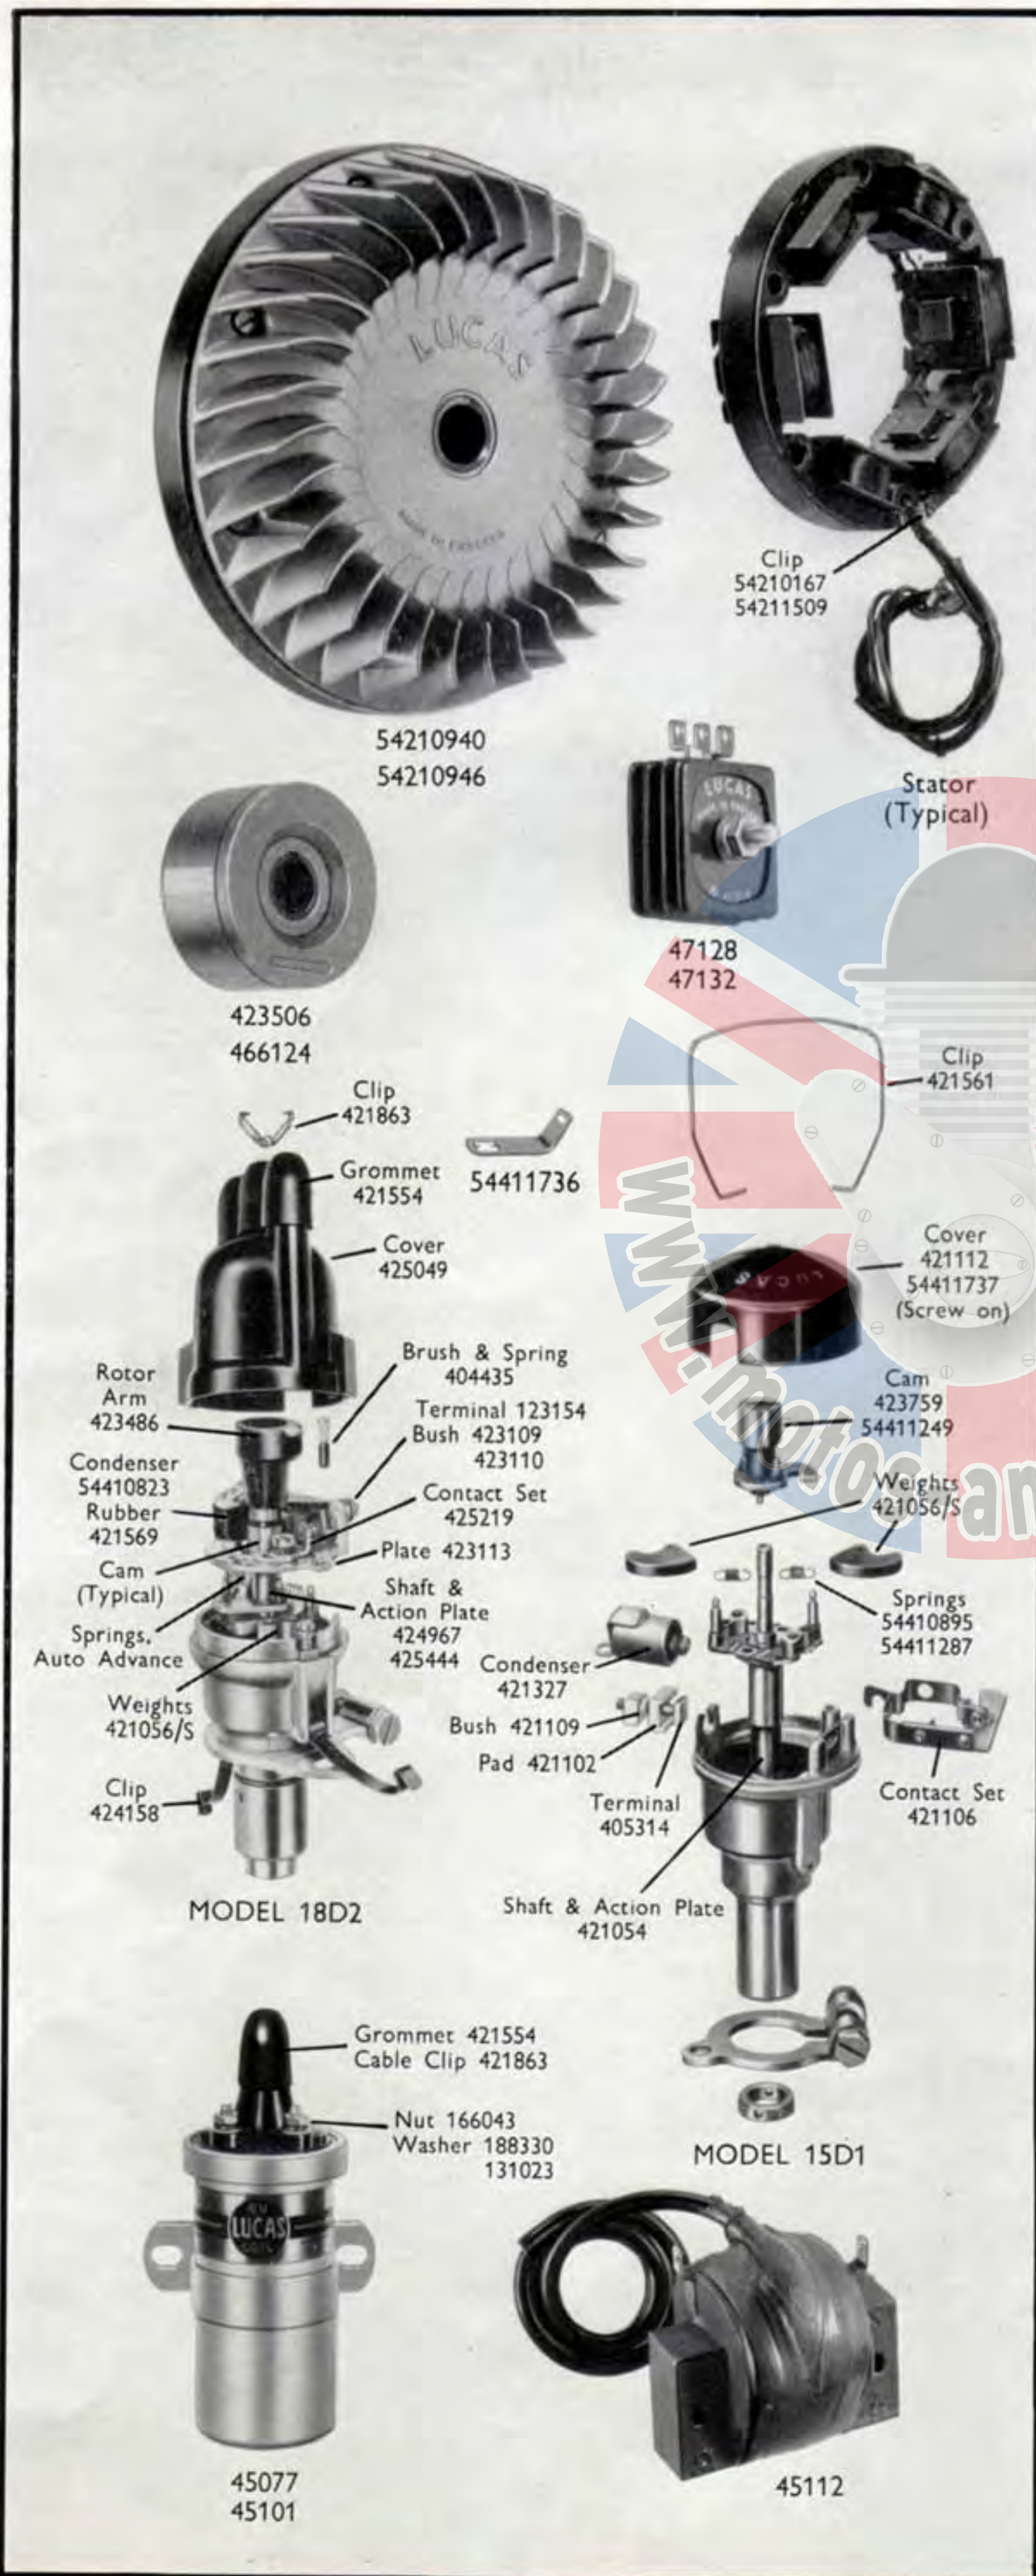

MAGNETOS

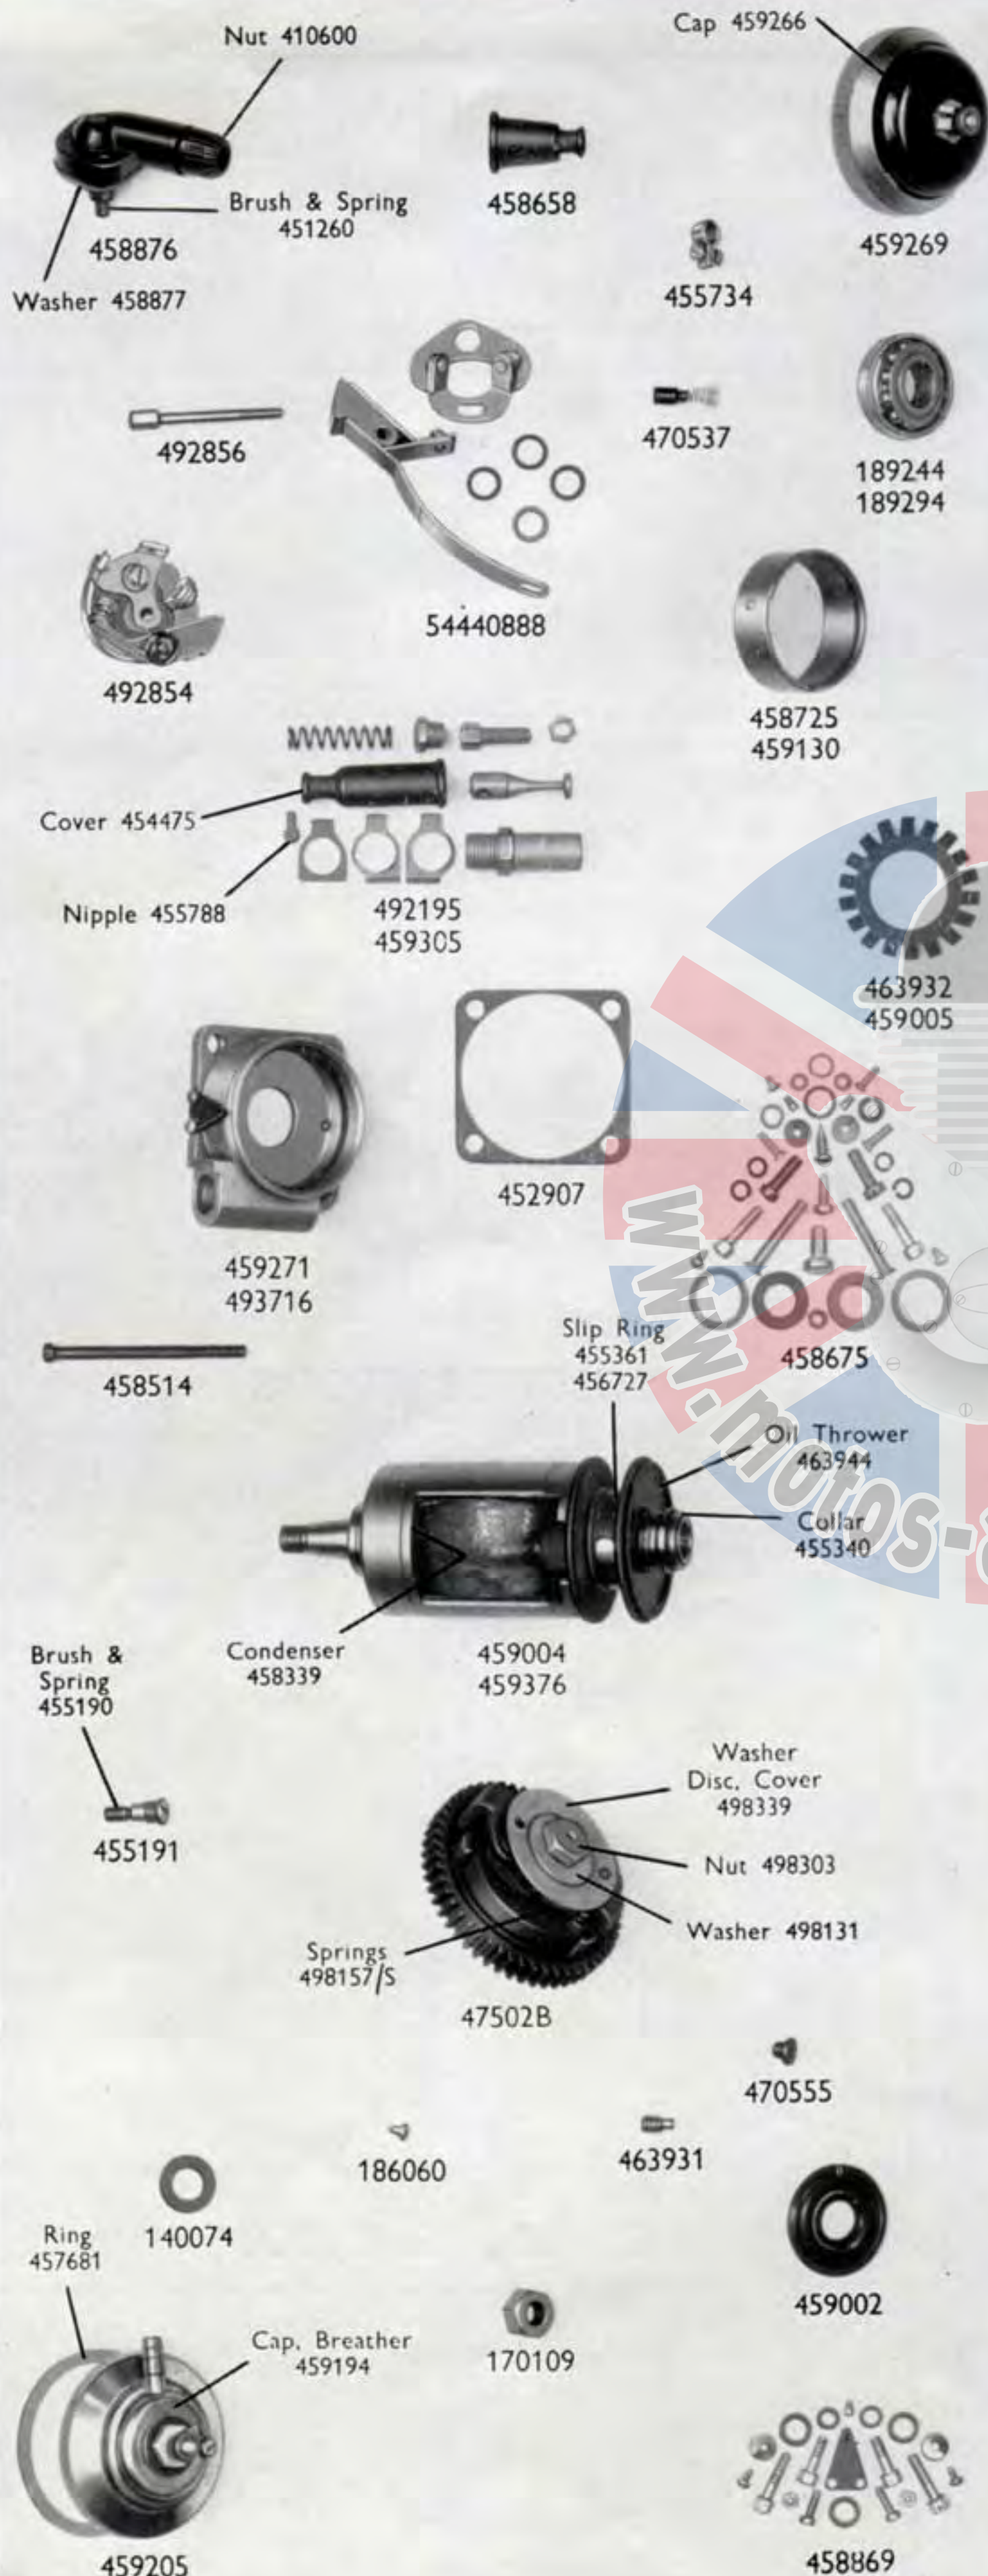

Part No. ... Model ...	42298D K2F	42344E K2F	42350H K2FC	42368D K2FC
Detailed Parts				
Clip, pick-up cover ...	—	—	455734	455734
Cover, pick-up, rubber ...	—	—	458658	458658
§ Pick-up ...	458876	458876	458876	458876
§ Brush and spring, pick-up ...	451260	451260	451260	451260
§ Nut, securing, high tension cable	410600	410600	410600	410600
Washer, seating pick-up ...	458877	458877	458877	458877
§ Cover, contact breaker ...	459269	459269	459205	459205
§ Brush and spring, ignition cut-out ...	455190	455190	455190	455190
Ring, sealing, contact breaker, rubber ...	457681	457681	457681	457681
Cap, breather or baffle ...	459266	459266	459194	459194
Screw, fixing contact breaker ...	492856	492856	492856	492856
§ Contact breaker ...	492854	492854	492854	492854
§ Contact set ...	54440888	54440888	54440888	54440888
Ring, retaining lever ...	154660	154660	154660	154660
Washer, insulating ring ...	161673	161673	161673	161673
Screw, fixing spring bracket ...	100614	100614	100614	100614
Washer, insulating bracket screws ...	161681	161681	161681	161681
Bush, insulating spring bracket	492853	492853	492853	492853
Bracket, supporting spring ...	493202	493202	493202	493202
Control set, advance and retard ...	492195	—	459305	—
§ Cover, control set, rubber ...	454475	—	454475	—
Plunger, controlling cam ...	493304	—	493304	—
Nipple, control cable ...	455788	—	455788	—
§ Cam ...	458725	459130	458725	459130
§ Plate, housing contact breaker ...	459271	493716	459271	493716
§ Cup, insulating bearing ...	463932	463932	463932	463932
Pin, cam timing screw ...	186060	186060	186060	186060
Screw, cam timing ...	463931	463931	463931	463931
Shim, .005" thick, packing contact breaker housing ...	452907	452907	452907	452907
Nut, securing gear or sprocket ...	170109	170109	170109	170109
Washer, gear securing nut ...	140074	140074	140074	140074
§ Armature ...	459004	459004	†459376	†459376
§ Slip ring ...	455361	455361	456727	456727
Bolt, through fixing ...	458514	458514	458514	458514
Condenser ...	458339	458339	—	—
Thrower, oil ...	463944	463944	463944	463944
Washer, oil thrower linen ...	164334	164334	164334	164334
Collar, spacing ...	455340	455340	455340	455340
§ Bearing, contact breaker end ...	189294	189294	189294	189294
§ Bearing, driving end ...	189244	189244	189244	189244
§ Brush, spring and holder, earthing	455191	455191	455191	455191
§ Brush and spring, earthing ...	455190	455190	455190	455190
§ Seal, oil, bearing ...	459002	459002	459002	459002
§ Cup, insulating driving end bearing	459005	459005	459005	459005
§ Sundry parts, set ...	458675	458675	458675	458675

AUTO ADVANCE UNIT

Part No. ...	47502B
Detailed Parts	
Washer, cover clip ...	498131
Washer, disc cover ...	498339
§ Spring set ...	498157/S
Nut, fixing ...	498303

§ Recommended spares for stock

† Complete with condenser

AMMETER

Part No.	36189A
Model	BM4
Detailed Parts	
§Screw, terminal	121610

HORNS

Part No.	70048J	70145D	70155A
Model	HF1441	HF1950	5H
Part No.	—	—	70156A
Model	—	—	5H
Detailed Parts			
§Bracket	701851	—	—
Nut, clamp, front	178931	—	—
Nut, locking, tone disc	703106	—	—
Tone disc	701829	—	—
§Diaphragm	700714	—	—
§Contact set	703233	—	—
Terminal block	703004	—	—
Screw, terminal	—	106483	—
§Sundry parts, set	703235	—	—

HORN PUSH

Part No.	76204A	76210A
Model	4A	4A
Detailed Parts		
§Screw, terminal	119520	119520
Clip, fixing	762229	762250
§Screw, fixing	135480	135480
§Nut, fixing	153491	153491

HORN PUSH AND DIPPER SWITCH


Part No.	31563D
Model	25SA
Detailed Parts	
§Screw, terminal	120610
Button and cover	380660
Base and lever	380658

BULBS

Part No.	Volts	Watts	Contact	Filament
166	6	24/24	B.P.F.	Transverse, vertical dip
312	6	30/24	B.P.F.	Transverse, vertical dip
350	12	35/35	B.P.F.	Transverse, vertical dip, Duplo
352	6	18/3	S.B.C. offset pin	Transverse
373	6	30/24	B.P.F.	Transverse, dip left
377	6	25/25	B.P.F.	Hooded Duplo
380	12	21/6	S.B.C. offset pin	Transverse
384	6	18/6	S.B.C. offset pin	Transverse
403	6	35/35	B.P.F.	Bow and Hooded Axial, Duplo
425	12	24/24	B.P.F.	Transverse, vertical dip
951	6	6	M.C.C.	Coil
987	12	2.2	M.E.S.	Coil
988	6	3	M.C.C.	Coil
989	12	6	M.C.C.	Coil
998	6	.1 amps	M.E.S.	Coil

B.P.F. British Pre-Focus S.B.C. Small Bayonet Cap
M.C.C. Miniature Centre Contact M.E.S. Miniature Edison Screw Cap
§Recommended spares for stock



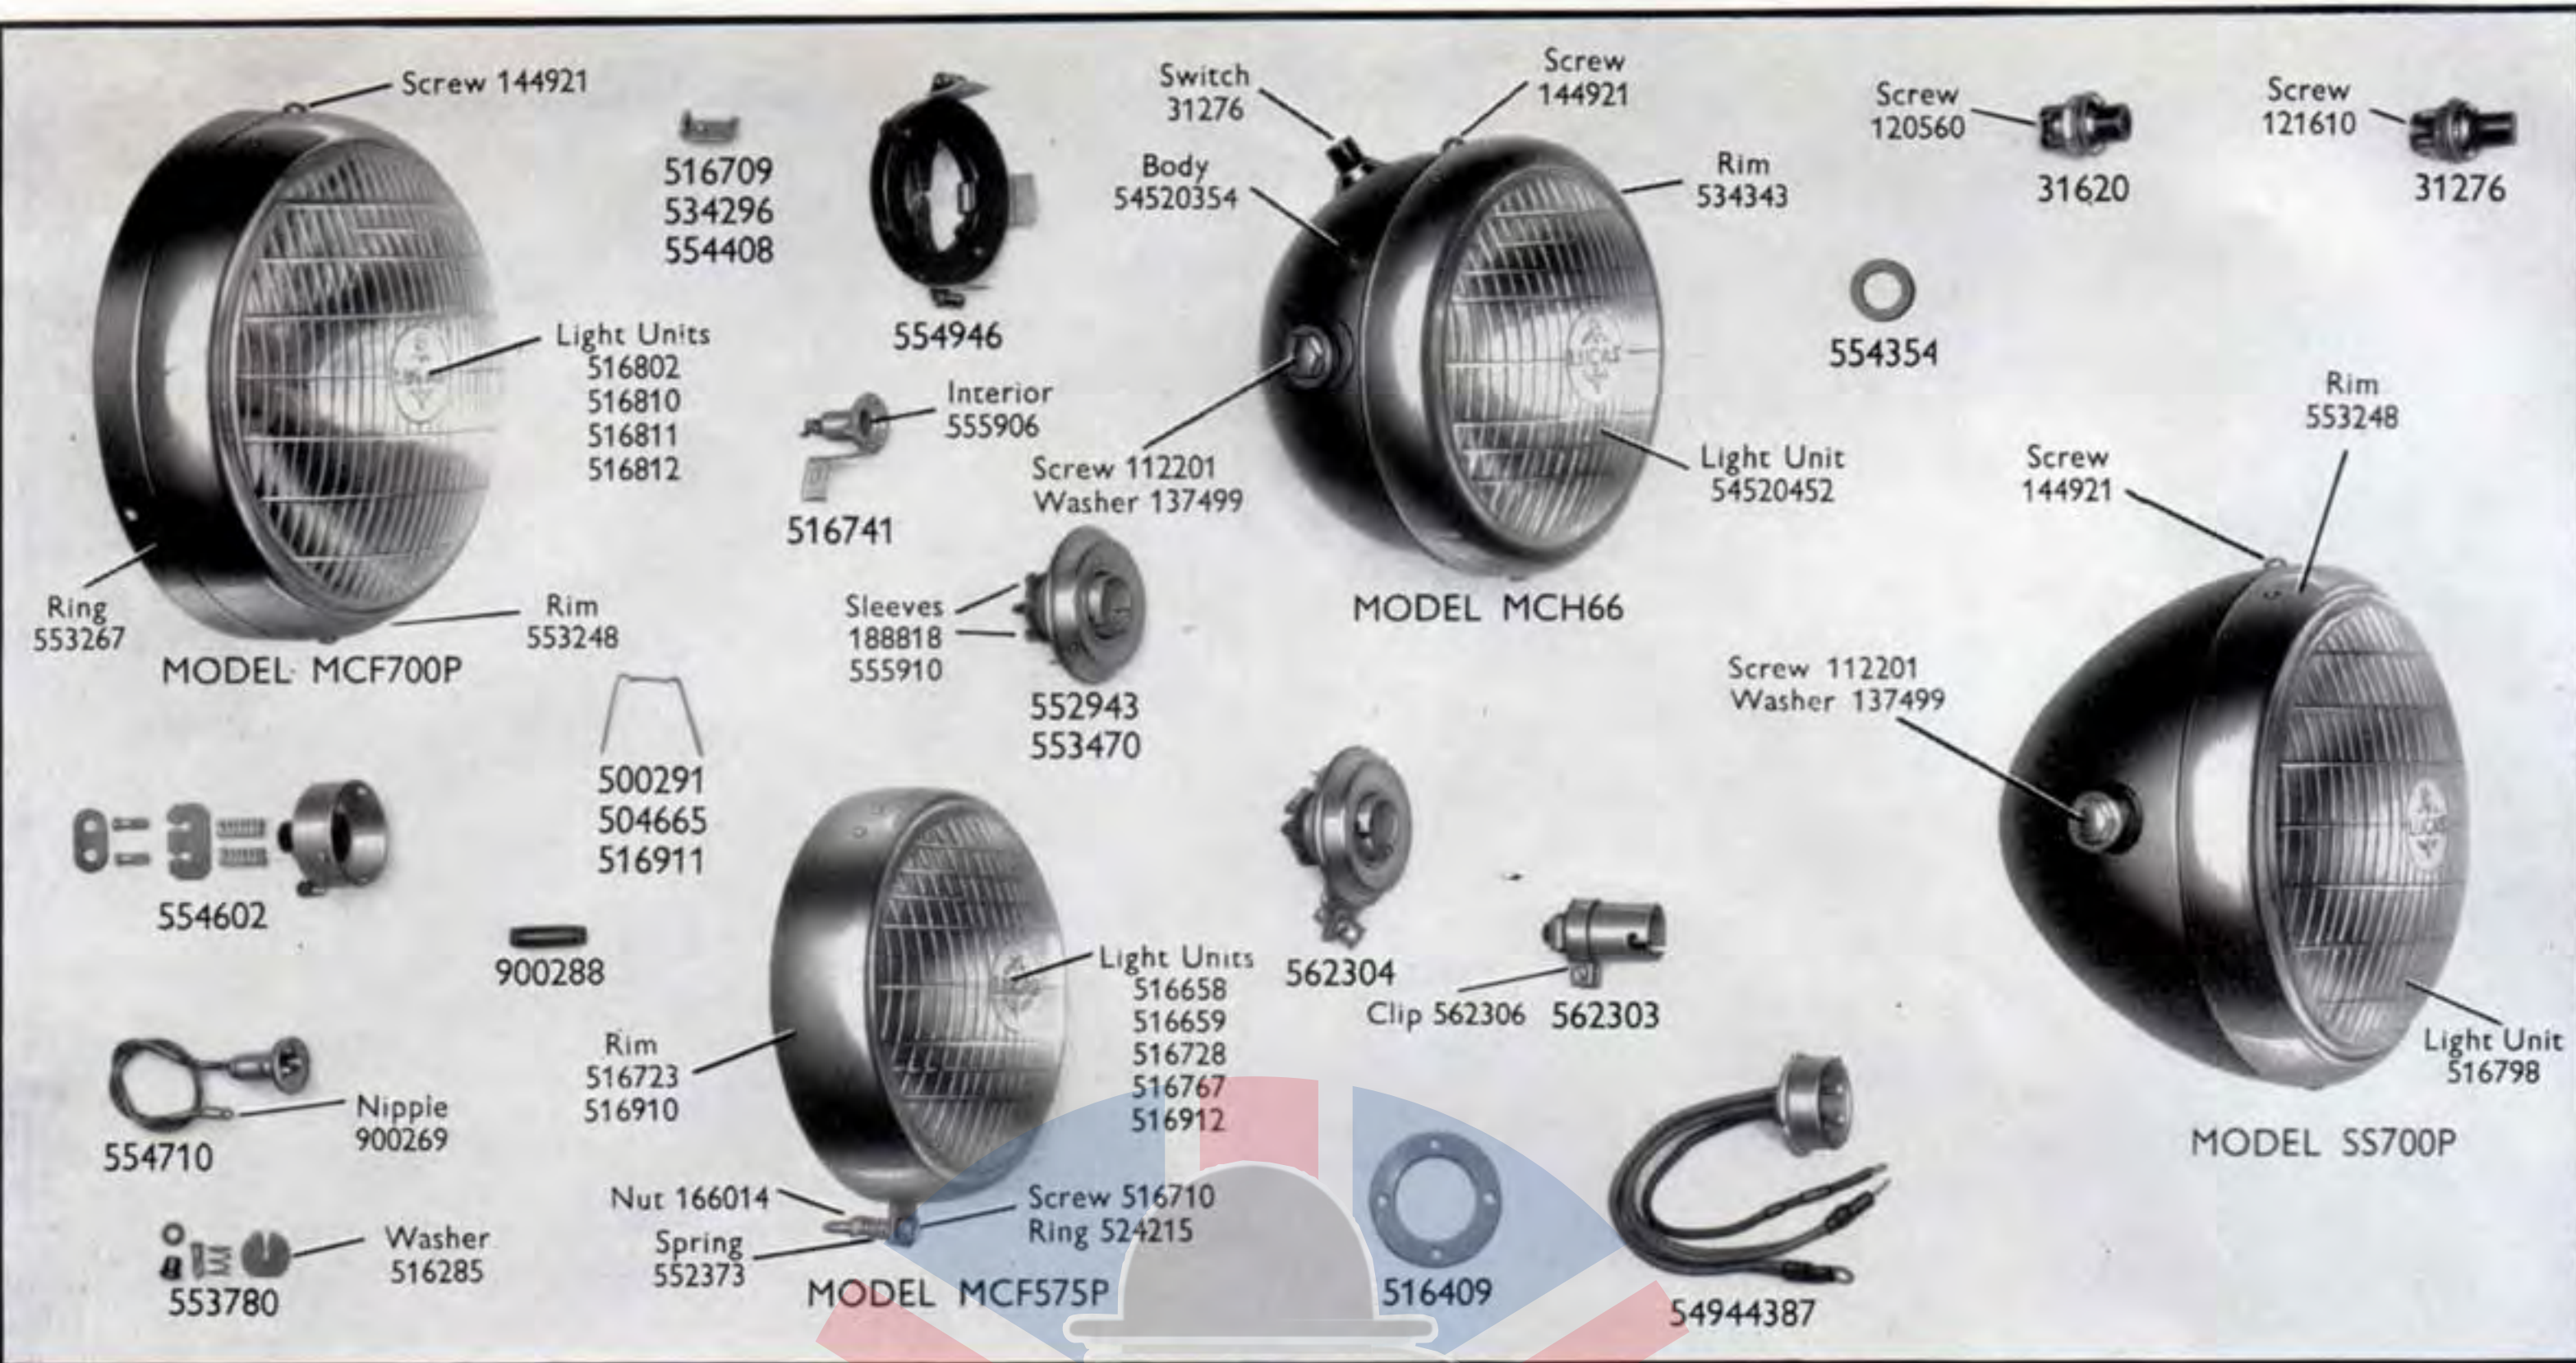

HEADLAMPS

HOME

Part No. Model	58417D MCF575P	58421B MCF575P	51519B MCF575P	51860B MCF575P
Light unit	516767	516767	516728	516812
Bulbholder	554946	554946	554946	554602
Bulb, main	312	425	312	373

EXPORT, EUROPE NOT FRANCE

Part No. Model	58418D MCF575P	58422D MCF575P	51547D MCF575P	51757D MCF700P
Light unit	516658	516658	516658	516811
Bulbholder, main	554946	554946	554946 & 516741	554602
Bulbholder, speedo illumination	—	—	516741	—
Interior, bulbholder	—	—	555906	—
Bulb, main	377	350	377	403
Bulb, speedo illumination	—	—	988	—

EXPORT, FRANCE

Part No. Model	58419A MCF575P -EF	58423A MCF575P -EF	51634D MCF575P -EF	51758B MCF700P -EF
Light unit	516912	516912	516912	516802
Backshell	553470	553470	562304	552943
Bulbholder	562303	562303	562303	562303
Clip and screw	562306	562306	562306	562306
Interior, speedo illumination	—	—	555906	—
Bulb, speedo illumination	—	—	988	—
Ring, screw retaining	—	—	524215	—

EXPORT, U.S.A.

Part No. Model	58420A MCF575	58424A MCF575	51548D MCF575	51756E MCF700P
Light unit	516659	516659	516659	516810
Bulbholder, main	554946	554946	554946 & 516741	554602
Bulbholder, speedo illumination	—	—	516741	—
Interior, bulbholder	—	—	555906	—
Bulb, main	312	425	312	312
Bulb, speedo illumination	—	—	988	—
Washer, cable grip	—	—	516285	—

EXPORT, EXCEPT DESTINATIONS LISTED

Part No. Model	51519B MCF575P	51756E MCF700P
Light unit	516728	516810
Bulbholder	554946	554602
Bulb, main	312	312

Parts shown below are common to preceding lamps in appropriate columns

Rim or door	516723	516723	516723	553248
Rim or door	†516910	†516910	†516910	—
Plate, rim fixing	516709	516709	516709	554408
Screw, rim fixing	516710	516710	516710	144921
Nut, rim fixing screw	166014	166014	166014	—
Spring, trimmer	552373	552373	*552373	—
Ring, fixing	—	—	—	553267
Wire, light unit fixing	500291	500291	500291	504665
Wire, light unit fixing	†516911	†516911	†516911	—
Sleeve, terminal	555910	555910	555910	188818
Bulbholder, pilot	554710	554710	554710	554710
Interior, bulbholder	553780	553780	553780	553780
Ring, rubber seating	554354	554354	554354	554354
Bulb, pilot	988	989	988	988
Washer, cable grip	516285	516285	516285	—

HOME & EXPORT

Part No. Model	58556A SS700P	Part No. Model	58556A SS700P
Detailed Parts		Detailed Parts	
Ammeter	36084	Interior, pilot	553780
Ring, seating	523986	Ring, bulbholder seating	554354
Nut, terminal	166043	Washer, cable grip pilot	516285
Washer, terminal	185022	Bulb, main	312
Rim or door	553248	Bulb, pilot	988
Wire fixing	504665	Screw, lamp fixing	112201
Screw, rim fixing	144921	Washer, lamp fixing screw	137499
Plate, rim fixing	534296	Screw, plug fixing	133303
Light unit	516798	Nut, screw, plug fixing	166103
Bulbholder, main	554602	Washer	185012
Sleeve, terminal	188818	Ring, plug retaining	516409
Bulbholder, pilot	554710	Plug and cable	54944387

HOME & EXPORT

Part No. Model	58395A/B MCH66	Part No. Model	58395A/B MCH66
Detailed Parts		Detailed Parts	
Rim or door	534343	Light unit	54520452
Wire, fixing reflector	504665	Bulbholder	554602
Screw, fixing rim	144921	Sleeve, terminal	555910
Plate, fixing rim	534296	Bulb	166
Switch, lighting	31276	Grommet, cable entry	199003
Screw, terminal	121610	Screw, fixing lamp	112201
Switch, dip	31620	Washer, fixing screw	137499
Screw, terminal	120560	Body	54520354

Parts common to all the above lamps are shown in the next column

§Recommended spares for stock †Export to France

‡Except U.S.A.

*Not fitted to 51548D

REAR LAMPS

Part No. Model	53256A 529	53331A 529	53428B 529	53432D 564	53454B 564
§ Lens	526404	526404	526404	573839	573839
§ Window	526406	526406	526406	575200	575200
§ Screw, lens fixing	133551	133551	133551	—	—
Washer, screw retaining	161020	161020	161020	—	—
§ Nut, barrel, lens fixing	—	—	—	575219	575219
§ Gasket, lens sealing	—	—	—	575208	575208
Base, bulbholder and bracket	—	526421	—	576002	575964
§ Grommet, bulbholder	—	—	—	575207	575207
§ Bulbholder, shell	554719	526418	554719	575209	575209
§ Interior, bulbholder	553780	573828	553780	573828	573828
§ Bulb	988	352	951	384	380
Base, rubber	526408	526415	526408	—	—
Screw, base fixing	526410	526410	526410	—	—
Nut, base fixing screw	166103	166103	166103	—	—
Washer, base fixing screw	188412	188412	188412	—	—
§ Grommet, cable	—	—	—	573825	573825
§ Nut, lamp fixing	—	—	—	166014	166014
Washer, shakeproof	—	—	—	188327	188327
Washer, fixing bolt spacer	—	—	—	131023	131023

LIGHTING SWITCH

Part No. Model	31276A PS6	31784B 41SA	54033028 63SA
§ Knob	—	351815	—
Screw, knob fixing	—	127301	—
Washer, knob fixing screw	—	185038	—
§ Screw, terminal	121610	120560	—
Shaft, headpiece	—	54330517	—
Roller	—	351660	—
Plunger	—	351661	—
Spring	—	351662	—
Lever assembly, contact	—	351528	—
§ Connector	—	—	900269
§ Connector, tube, single	—	—	900288
Cover, rubber	—	—	332521
§ Connector, tube, double	—	—	850641

LIGHTING AND IGNITION SWITCH

Part No. Model	31443E PRS8	31460A PRS8	54033027 63SA
§ Key	318341	318341	—
§ Screw, terminal	120584	120584	—
Screw, knob fixing	319333	319333	—
Grommet	318323	318323	—
Rotor, lighting	313053	313053	—
Terminal, lighting	318349	318349	—
Rotor assembly, ignition	313052	313052	—
Terminal, ignition	318316	318316	—
Nut, fixing	180670	180670	—
Cap and plate	318331	318331	—
Screw, body fixing	198887	198887	—
Nut, spindle	169290	169290	—
§ Connector	—	—	900269
§ Connector, tube, single	—	—	900288
§ Connector, tube, double	—	—	850641
Cover, rubber	—	—	332521

CUT-OUT SWITCHES

Part No. Model	31376A SS5	76210A 4A	76204A 4A
§ Screw, terminal	120584	119520	119520
Screw, fixing	—	135480	135480
Nut, fixing	—	153491	153491
Clip, fixing	—	762250	762229

DIPPER SWITCH

Part No. Model	31620D PS9	31549B 99
§ Screw, fixing	—	121964
Clip	—	380427
Screw, terminal	120560	—


BRAKE SWITCHES

Part No. Model	31437B 22B	31688A 6SA
† Spring	315738	—
Cover	—	360363
§ Sleeve, terminal	—	188818

§ Recommended spares for stock

† Order separately

STARTING MOTOR

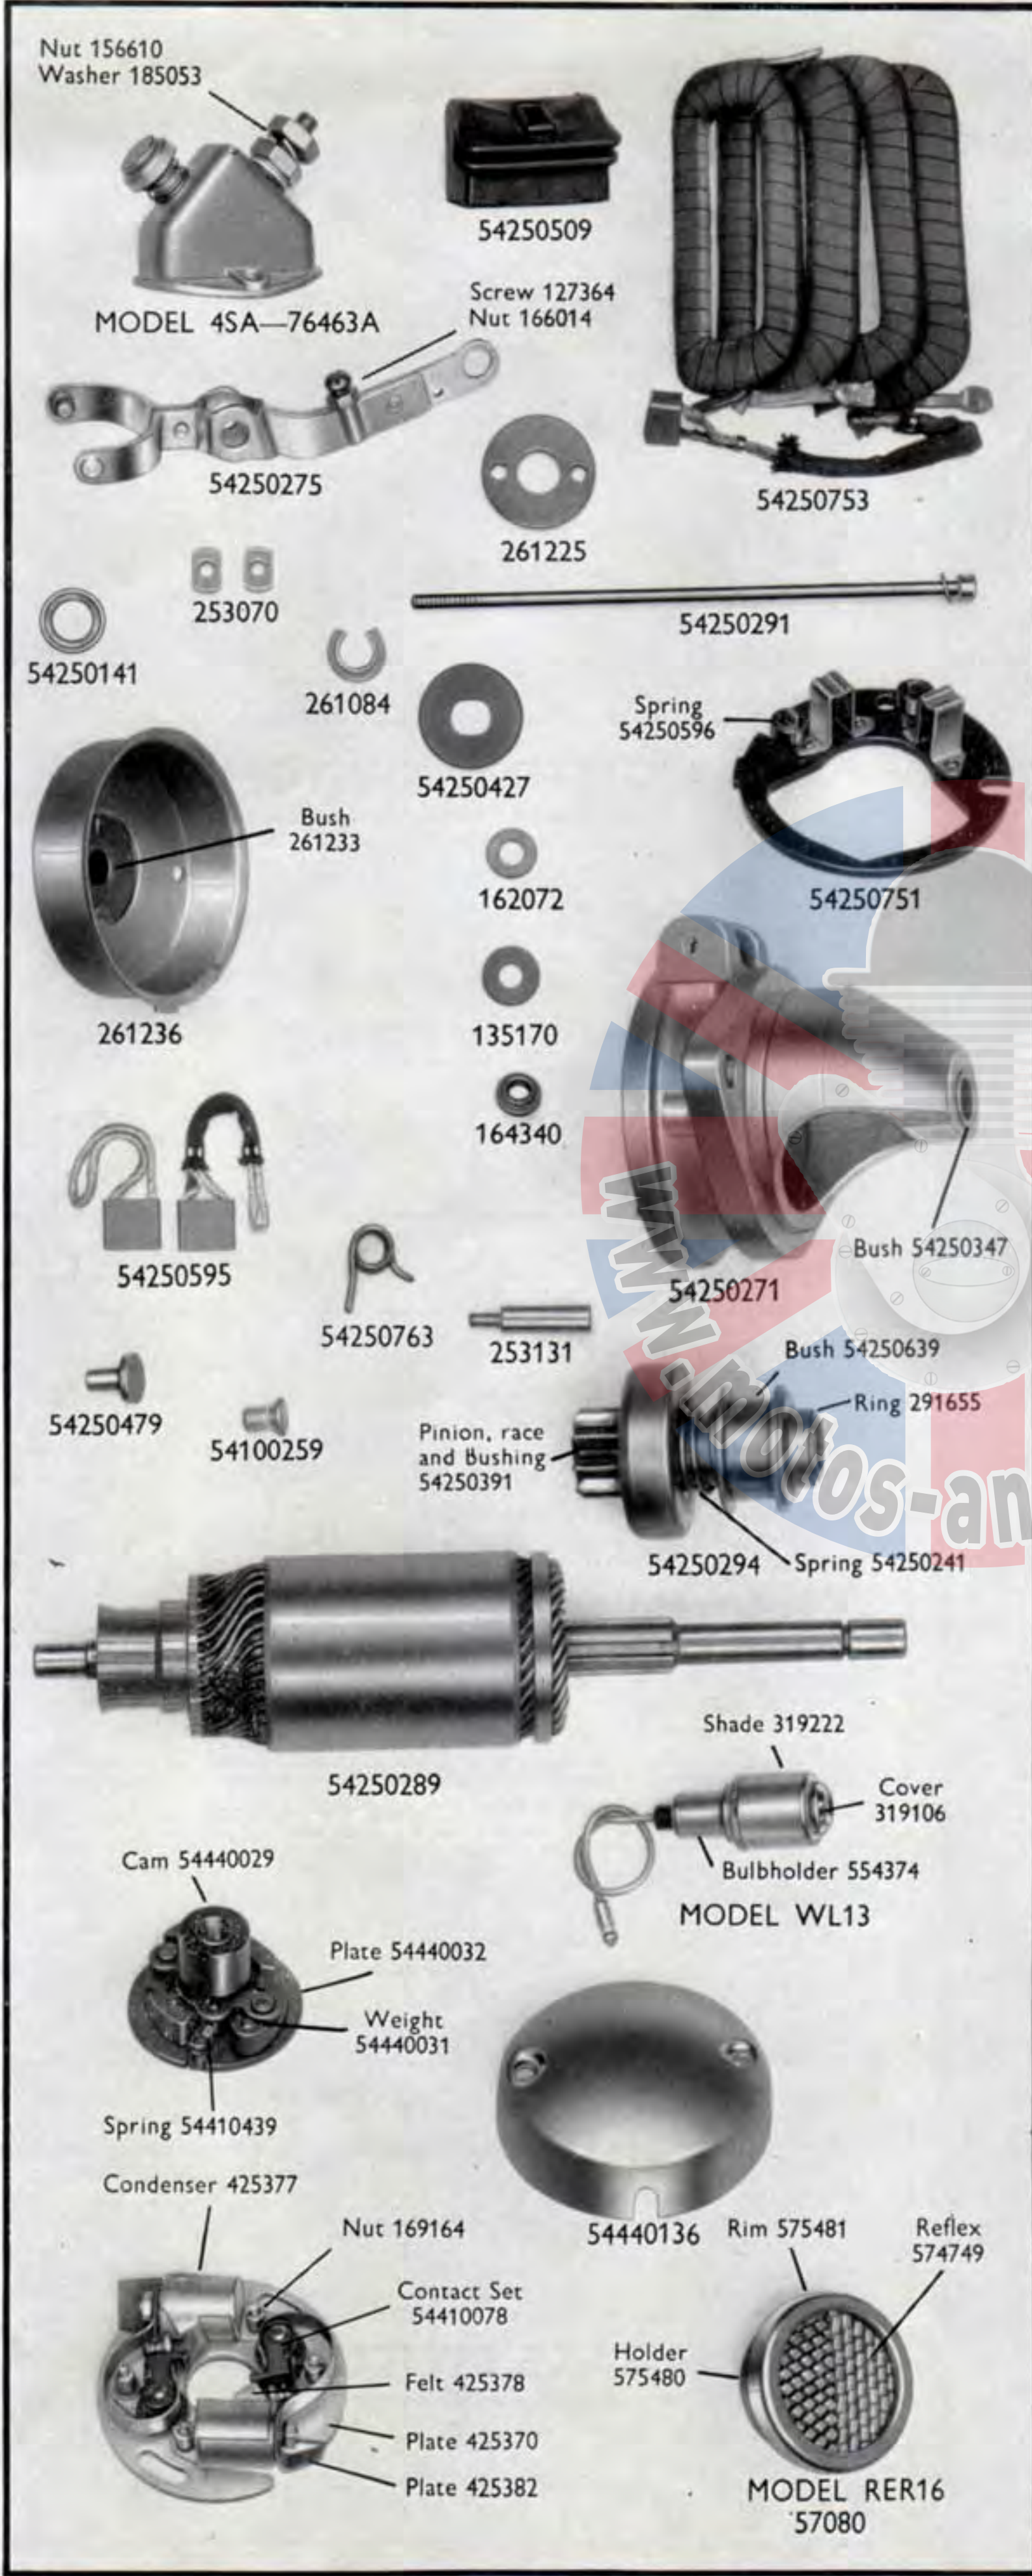

Part No. Model	26501A/D M3
Detailed Parts	
Bolt, through fixing	54250291
Bracket, fixing	54250271
Bushing, bracket	54250347
Screw, bearing, lever fixing	253131
Spring, lever	54250763
Shoe, operating lever	253070
Lever and peg	54250275
Screw, adjusting	127364
Nut, adjusting screw	166014
Washer, cup, armature location	54250141
Circlip, armature location	261084
Drive	54250294
Pinion, with race and bushing	54250391
Bushing, pinion	54250355
Bush, operating drive	54250639
Spring, cushioning	54250241
Ring, locking	291655
Armature	54250289
Washer, brake	261225
Plate, steel brake	54250427
Brush, set	54250595
Bracket or frame, commutator end	261236
Bushing, bracket	261233
Plate, with brush holders and springs	54250751
Springs, set, brush tension	54250596
Terminal, field	54250479
Washer, plain	135170
Washer, insulating terminal	162072
Bush, insulating terminal	164340
Screw, pole piece	54100259
Coils, field	54250753
Cover, rubber, waterproofing lever	54250509
Sundry parts, set	54251434

SWITCH, STARTING MOTOR

Part No. Model	76463A 4SA
Detailed Parts	
Nut, terminal	156610
Washer, spring	185053

CONTACT BREAKER UNIT

Part No. Model	47583B 4CA
Detailed Parts	
Cam	54440029
Weights, auto advance	54440031
Sleeve, and action plate	54440032
Spring, set, auto advance	54410439
Nut, fixing condenser angle plate	169194
Plate, insulating condenser terminal	425382
Contact set	54410078
Condenser	425377
Felt, lubricating cam	425378
Plate, contact breaker base	425370
Grommet	54190045
Cover	54440136

REFLEX REFLECTOR

Part No. Model	57080A RER16
Detailed Parts	
Reflex reflector	574749
Reflex holder	575480
Rim or door	575481
Nut, fixing	175300
Washer	188330

WARNING LIGHTS

Part No. Model	38197B WL13	38198B WL13
Detailed Parts		
Shade	319222	319222
Cover and window	319106	319106
Bulb	987	998
Bulbholder	554734	554734

§Recommended spares for stock